 
 


How to prime and care for your sprayer:

 
1. Remove cap from container and replace with sprayer hose and cap assembly. Tighten securely.

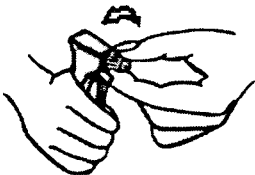

2. Turn sprayer nozzle one half turn counter-clockwise. Hold sprayer below the level of container and prime by pumping trigger 10-15 times until product is dispensed. Adjust nozzle to fine spray or jet stream as needed.

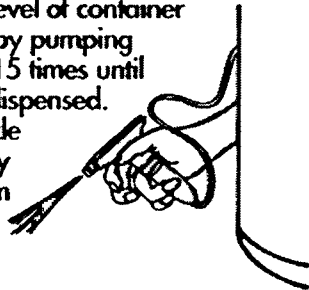

3. After each use, thoroughly flush sprayer and hose with water. Return hose and cap assembly to container; tighten securely. Turn nozzle to "OFF" position and store above level of liquid in container to prevent leakage.

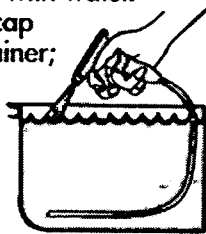

NOTE: If sprayer does not function properly, remove nozzle and check nozzle hole and holes in rubber component for obstructions. Check to make sure nozzle is not in "OFF" position. Replace nozzle, return sprayer assembly to container and proceed.

